 




INSTALLATION INSTRUCTIONS

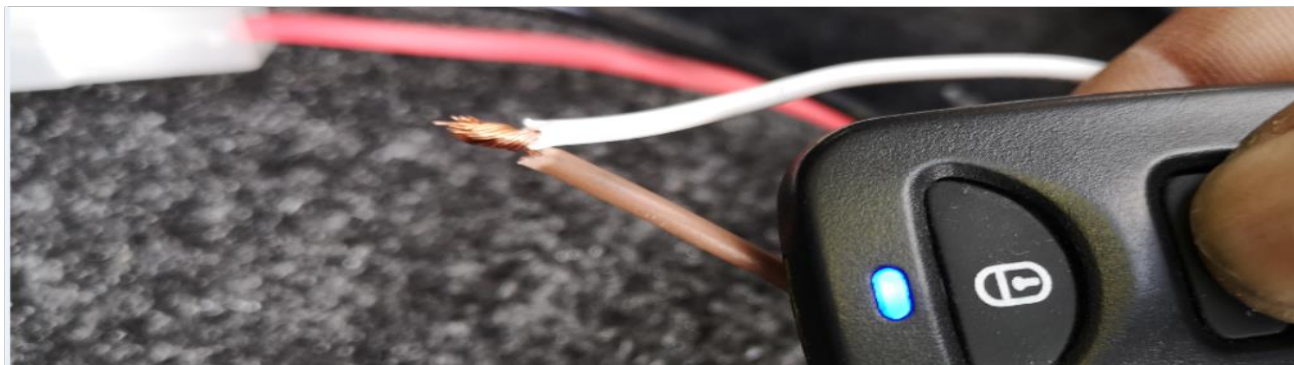

Components



Tools



Special notes

- * Some units have connectors on programming wires(white & brown) and do not require step 3.
- * All remotes must be present, as programming unlinks all previously linked remotes. Previously linked remotes need to be re-linked along with any new remotes.
- * The brown and white wires are for programming remotes only. Do not leave connected.



Program the remote(s)

Locate the white and brown (remote programming) wires near the electric connectors.

1



Disconnect the connector on red wires

2



Strip off about 10mm insulation from the brown and white wires (ignore if connectors fitted)

3



Connect the brown and white wires by twisting, or connecting the connectors (if fitted)

4



OR

Reconnect the connector on red wires.

5



6

Press the "CLOSE" button on the remote **FOR 5 SECONDS**




Press the "OPEN " button on the remote **FOR 5 SECONDS**. REPEAT STEP 6 & 7 FOR ADDITIONAL REMOTES

7



Cut the exposed wire of the twisted joint, or disconnect the connectors (if fitted)

8

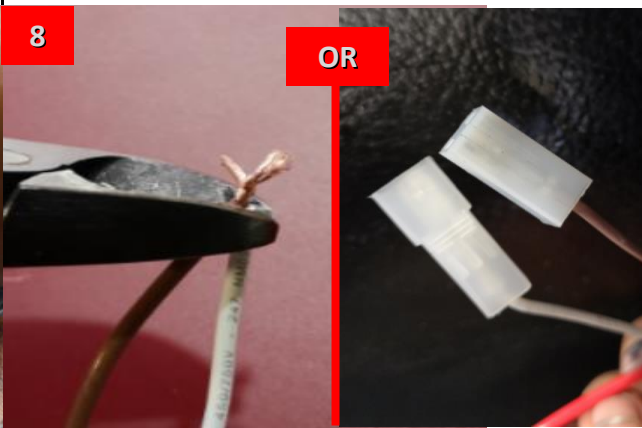


Test operation with both remotes. Repeat the process if necessary.

9



Neatly tuck away wiring.

10

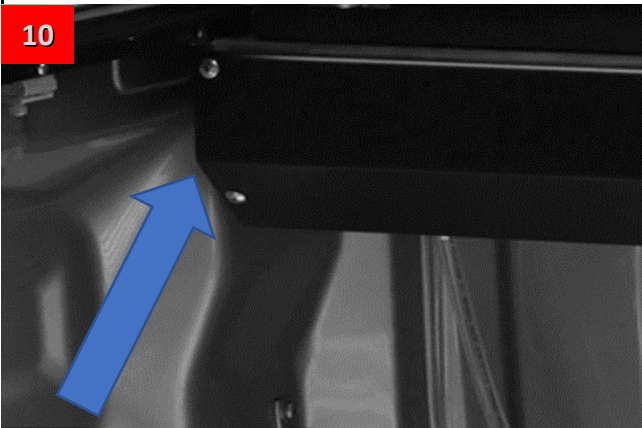

JP Deyzel
v1a 2019-09-30

RVE VEHICLE ENHANCEMENT
0800 738 7648 (NZ FREECALL) | rve.co.nz
1800 639 103 (AUSTRALIA FREECALL) | rveinternational.com

