


ROLLER SHUTTER LID

MAINTENANCE CARE INSTRUCTIONS MANUAL

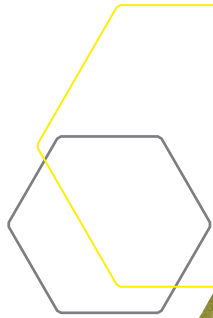

RVE

Driven by Design

THANK YOU FOR CHOOSING AN RVE SHUTTERLID.

With proper care and maintenance, the lid will provide many years of satisfactory operation.

Warranty notes:


Your RVE Shutterlid is covered against factory defect for a period of 3 years. Although every care is taken upon installation to maximise weather resistance, the RVE shutterlid is not guaranteed to be waterproof.

Warnings:

Do not stand or place any heavy objects directly onto the RVE Shutterlid. There are options available with Roof-rack products that will allow carrying loads above the RVE Shutterlid.

The RVE lids has a moving top cover, which poses a mechanical hazard – use with care. Do not allow animals or humans under the RVE Shutterlid. Maintenance is required to maintain optimal performance and warranty of your RVE Shutterlid.

Where possible, do not operate the RVE Shutterlid if water is puddled on top. Since the lid rolls onto itself, some water will get in contact with the bottom side of the shutters, which can drip inside the tray and be confused for a water leak.

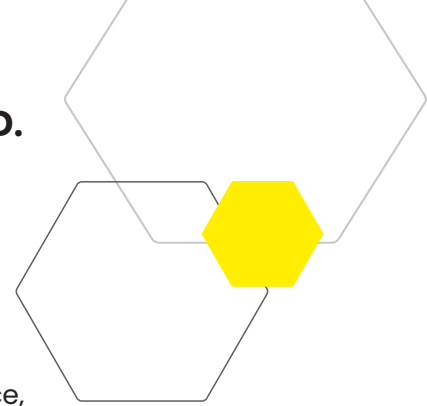

*Vehicle shown with additional extended sports bar and shutter lid

OPERATING INSTRUCTIONS.

RVE ELECTRIC SHUTTERLID.

To open the RVE Electric Shutterlid:

- If water is pooled on top, drive vehicle for several hundred meters to remove excess water before opening
- Ensure manual lock is in “open” position.
- Press button on remote to open the lid. Pressing any button during the operation will stop the motion of the lid

To close the RVE Electric Shutterlid:

- Press button on the remote to close the lid.
- Turn rear lock to “closed” position. This will prevent the lid from opening by accidental remote button press.
- For extra security, the RVE Shutterlid can be locked with a key as well.



OPERATING INSTRUCTIONS.

RVE MANUAL SHUTTERLID.

To open the RVE Manual Shutterlid:

- If key-locked, unlock the lid.
- Turn the lock 90 degrees counter clockwise while still holding the strap, until the lid slides toward the front of the vehicle.
- Approximately one third of the way, the latch bolts will engage and stop the lid from fully opening. To fully open the lid, turn the lock 90 degrees counter clockwise again and let it slide fully open. * Note: Always hold strap while opening - do not let it slam open.

To close the RVE Manual Shutterlid:

- With the tailgate open, pull the strap toward the tailgate with a smooth and even motion, until the latch bolts engage.
- Gently close the tailgate.
- For extra security, lock the unit by turning key clockwise 180 degrees. (Some wiggling of the lock ring may be required).



CARE INSTRUCTIONS:

As with anything mechanical, some minor maintenance is required from time to time. With normal use, check lid with every car wash, or once a month. Some friction and difficulty to achieve normal operation are usually a good indication that the lid is overdue for some TLC.

- A clean RVE Shutterlid, is a happy Shutterlid.
 - Wash with car wash soap only. Do not use harsh solvents or other chemicals.
 - Use a microfibre cloth to wipe dirt and dust from the siderail grooves.
 - Generously apply silicone lubricant spray into the side rail grooves.
Spraying while operating the lid (opening and closing) achieves good results.

- Check for and clear obstructions from the drain tubes.
 - Pull drain tubes from the tray, then twist 90 degrees anticlockwise to remove from shutter lid cartridge.
 - If there is any evidence of a blockage, have a bucket handy under these tubes
 - Poke a round object (screwdriver, dowel, stick or similar) into the cartridge drain holes, to push away anything that may be blocking the holes.
 - Inspect the tubes and remove any debris stuck inside them that could potentially inhibit drainage.
 - Secure the tubes to the drain holes by twisting the tube connector 90 degrees clockwise into the Shutter Lid cartridge insert the other end of the tube through to holes in the tray.

- Regularly check that the lid is secured to the vehicle tray.
If tightening is required, it can be achieved by tightening the internal clamps with a 11mm socket or spanner.



TROUBLESHOOTING & FAQ:

- **Q: My electric lid does not operate when I press the remote button**

A1: Check if fuse has blown. Found on red wire, +/- 15cm from vehicle battery within engine compartment.

A2: Check if remote light comes on when pressing the buttons – if not, remote battery may need replacing.

A3: Press button on control unit integrated onto the RVE Shutterlid cartridge. If it works, but not on remote, remote may need programming or replacement.

A4: If none of the above works, contact your dealership or RVE installation agent. If you need urgent operation of the unit, you can insert the manual override key into the designated hole until the motor-drive is released. Video?

- **Q: My electric lid does not fully close**

A1: Check side tracks are clear of any sticks or debris

A2: Clean and lubricate siderail slots. Apply some silicone lubricant spray to rear lower edge of the RVE Shutterlid, to overcome any friction it may encounter when sliding onto the tailgate.

A3: Try and close the lid with the engine running, as this provides more power to the unit for optimal operation.

A4: If none of the above works, contact your dealership or RVE installation agent.

- **Q: My electric lid does not fully open**

A1: Avoid operating the RVE Shutterlid, as this may cause damage to the outer surface of the shutters. Get in contact with your dealership or RVE installation agent.





RVE

Driven by Design

RETRO VEHICLE ENHANCEMENT LTD

www.rve.co.nz



Follow: @RVEdrivenbydesign

Phone: +64 9 582 0000 | Email: office@rve.co.nz

Address: 88 Leonard Road, Mount Wellington, Auckland 1060