


DO NOT
THROW AWAY!

TOOLS

		 11mm	 4mm & 5mm	 PRIMER	 GREASE	
 SILICONE SPRAY		 ISOPROPYL ALCOHOL	 Ø30mm & Ø50mm		 CLEAN CLOTH	 RUBBER HAMMER
	 SCISSORS					


INSTALLATION INSTRUCTIONS

UNPACKING THE PRODUCT

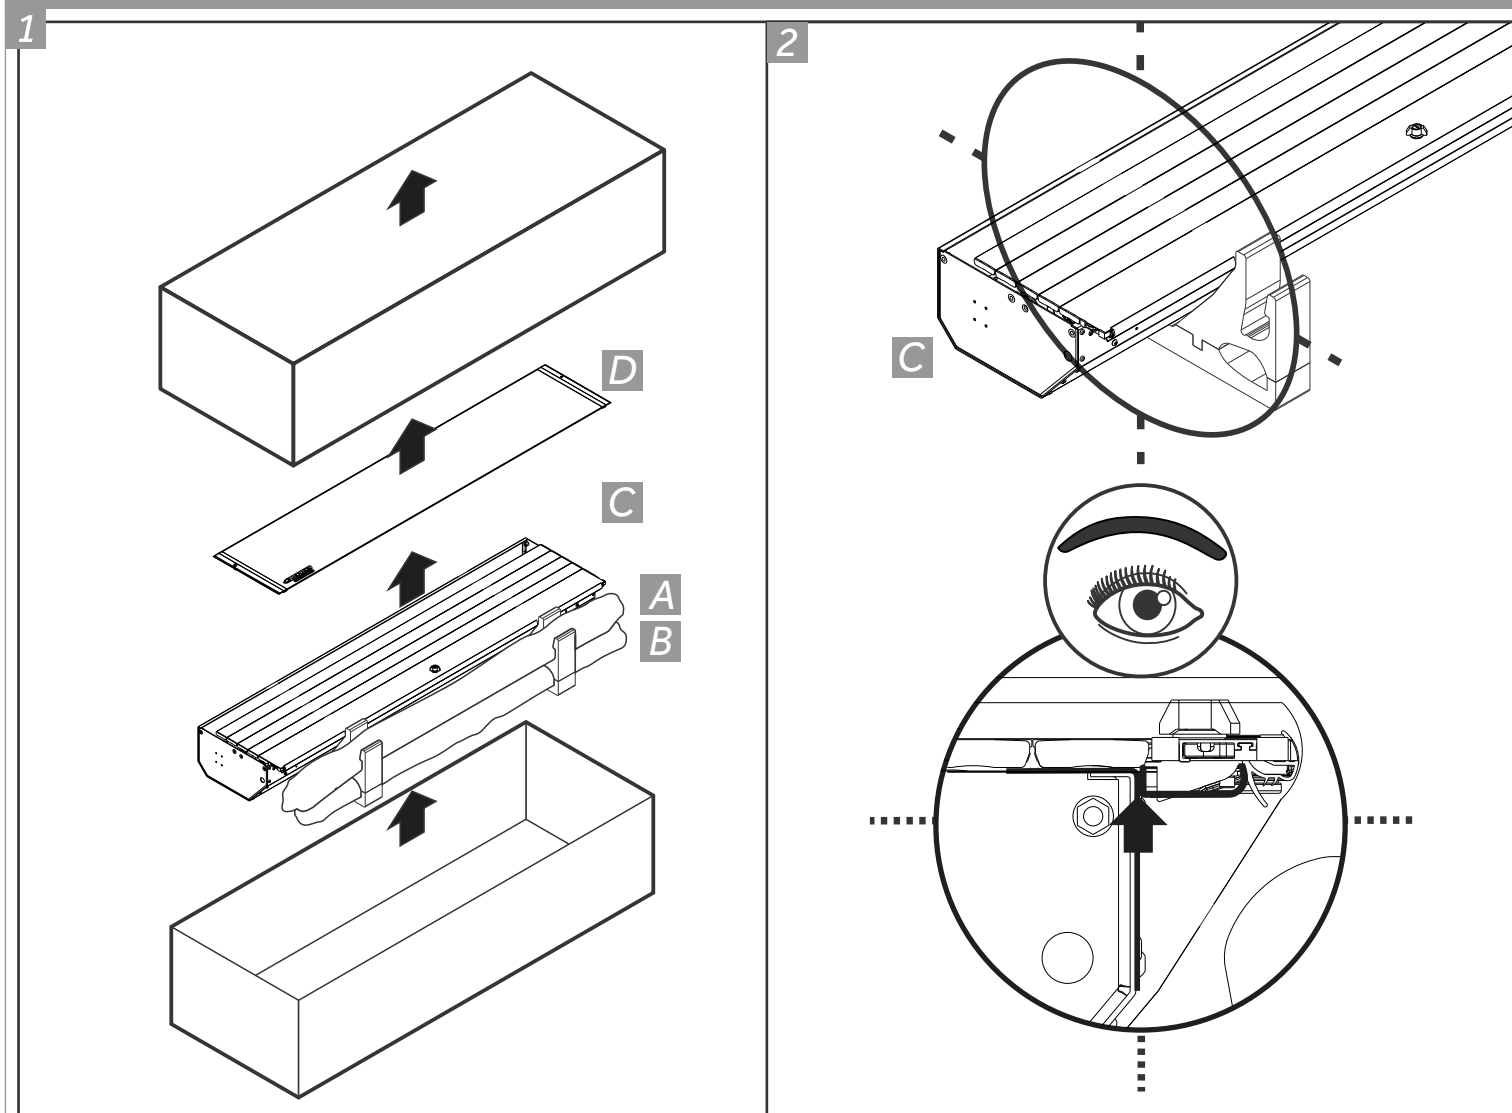


INSTALLATION INSTRUCTIONS



3

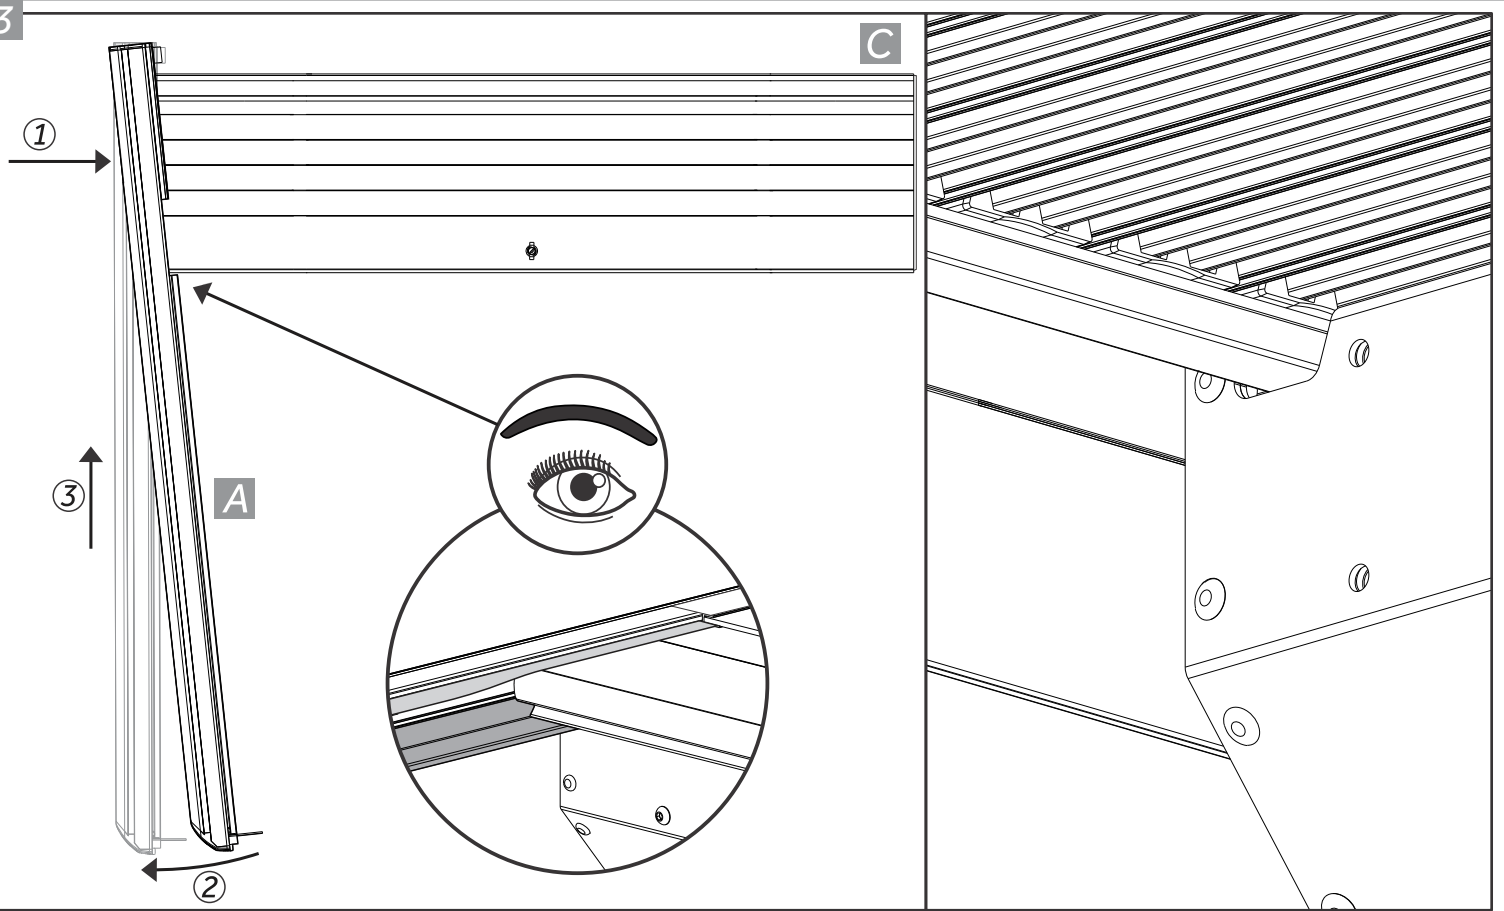

4

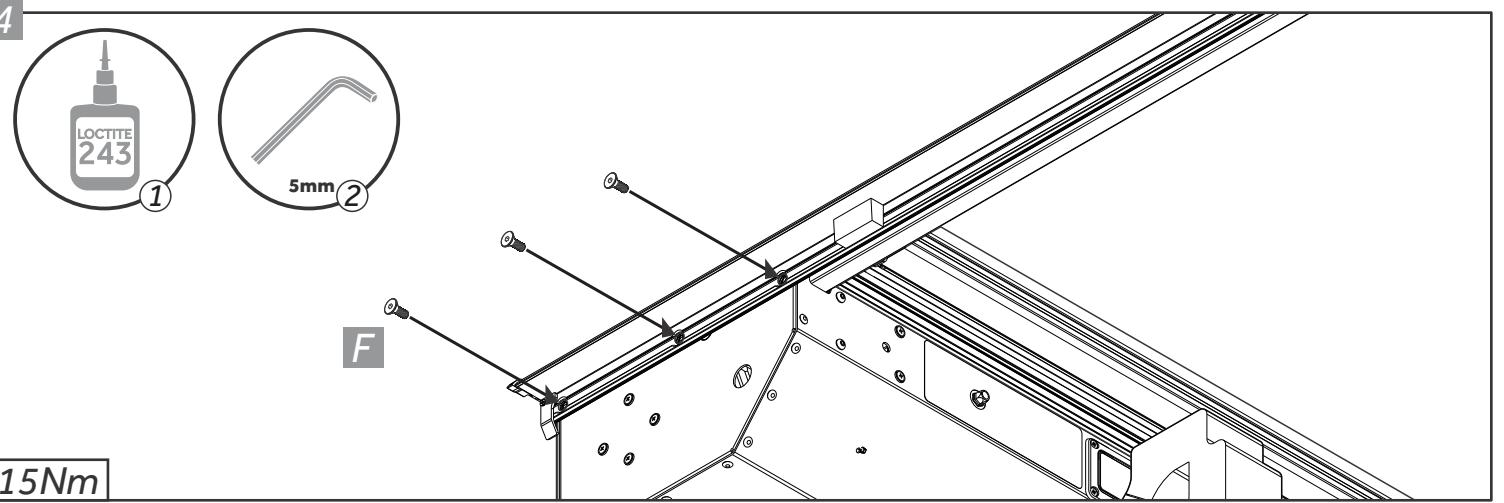


5

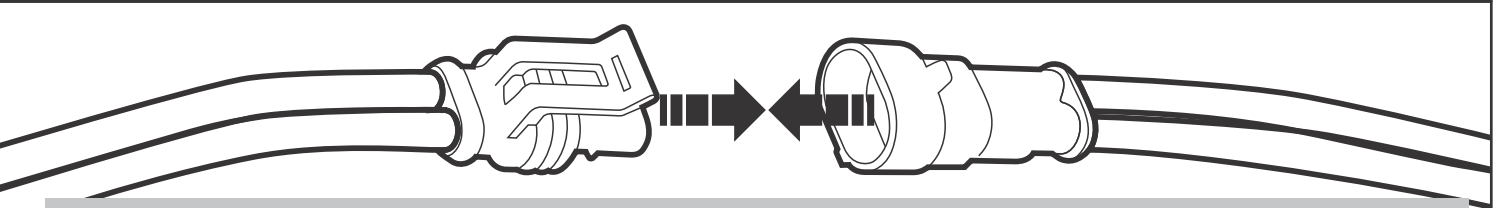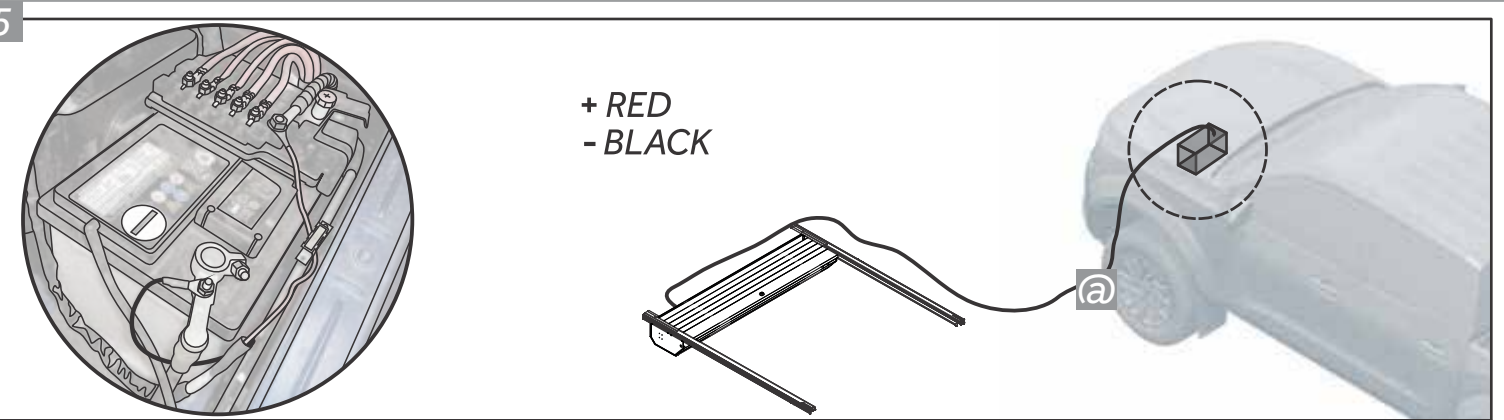


If you require further help or guidance please contact us +64 9 582 0000

INSTALLATION INSTRUCTIONS


6

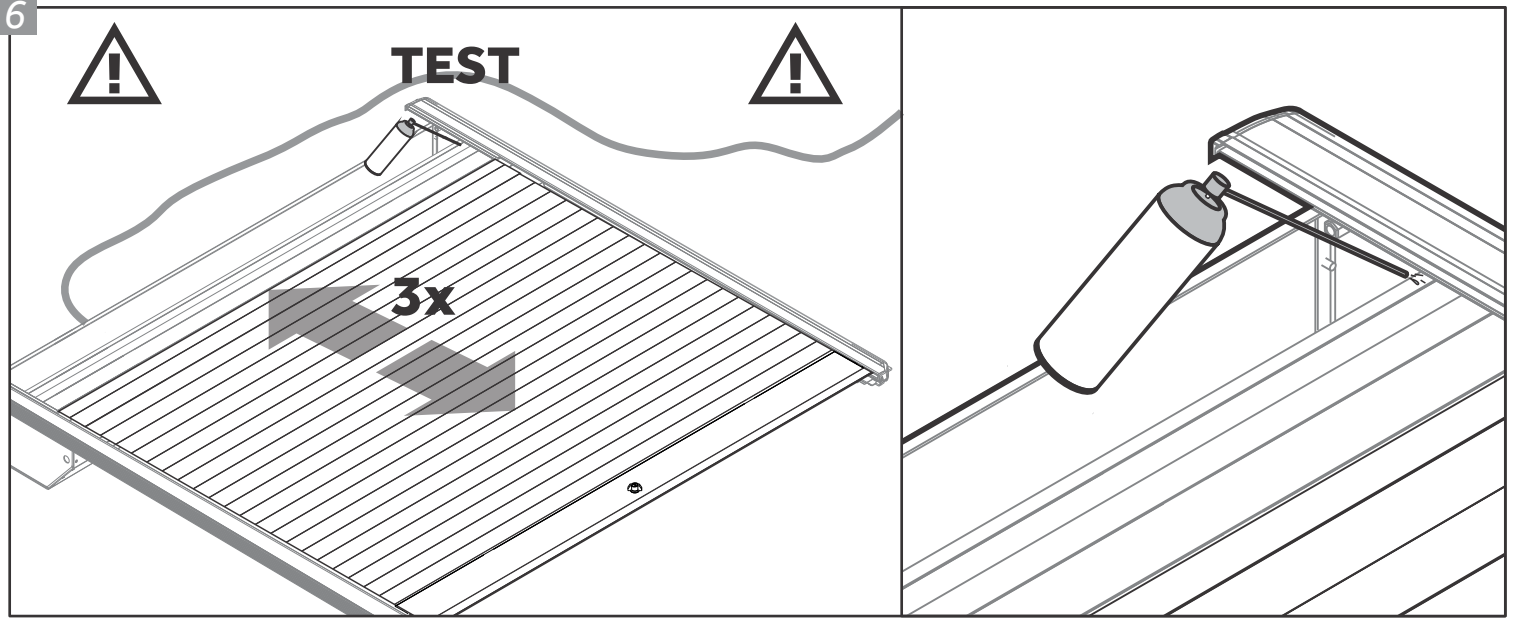

7

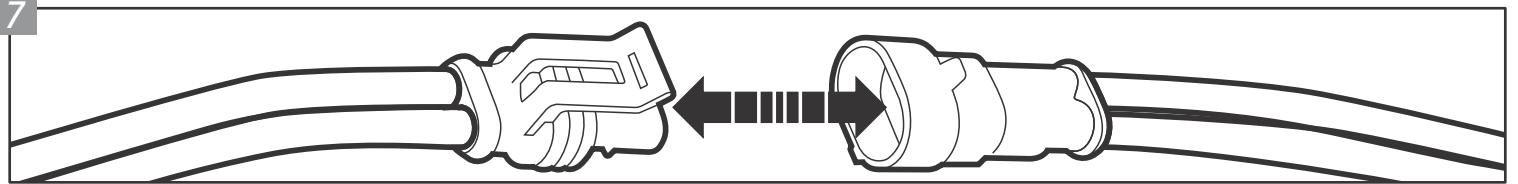

8

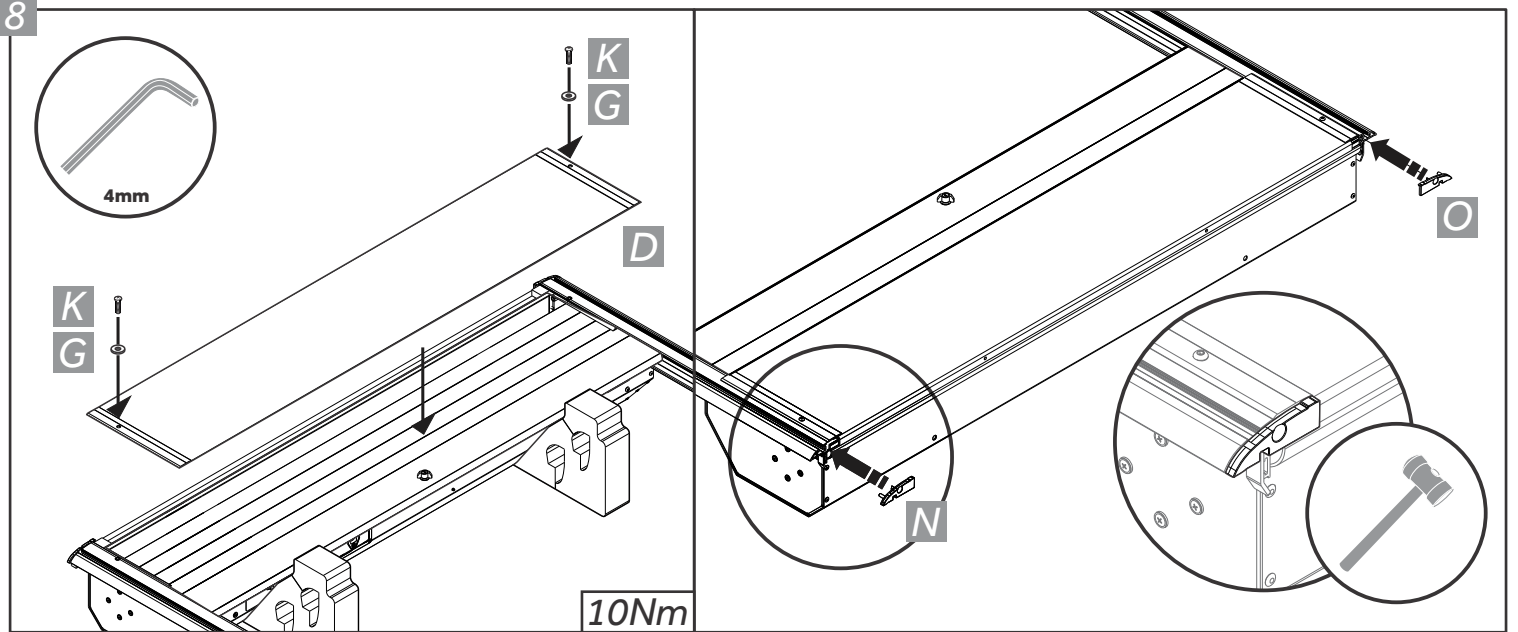


9




INSTALLATION INSTRUCTIONS


10

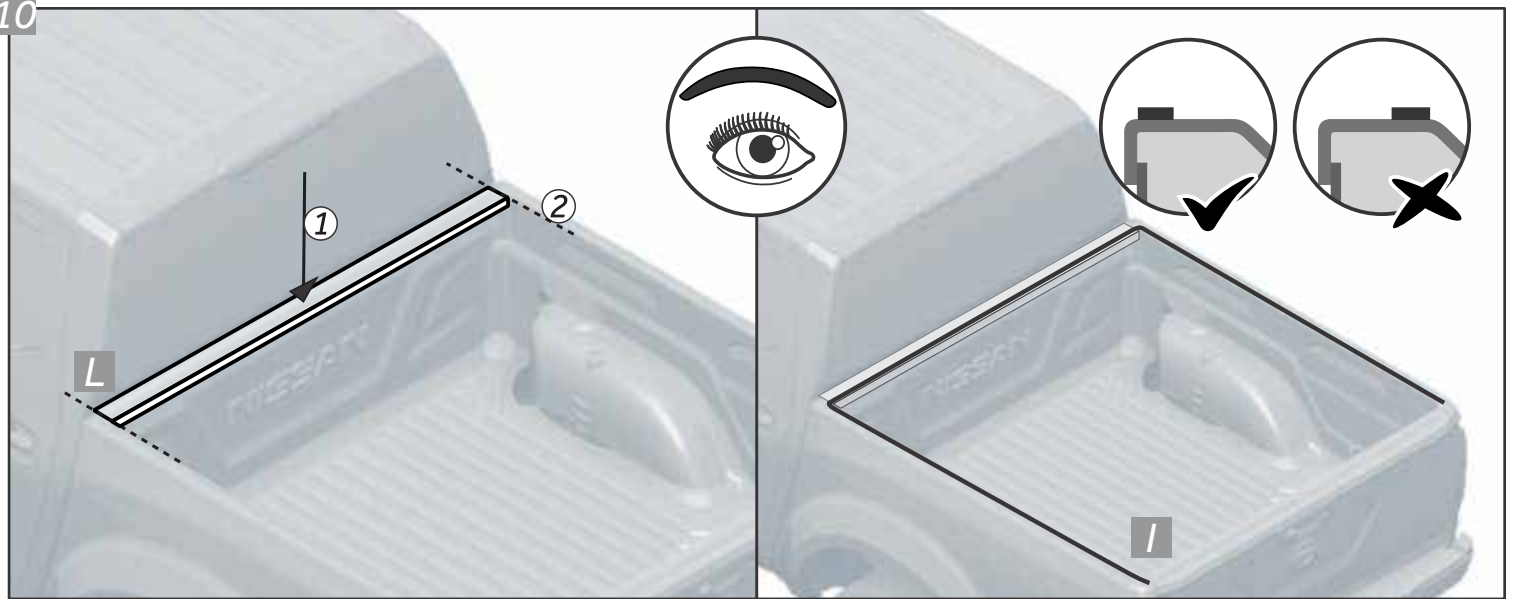

11

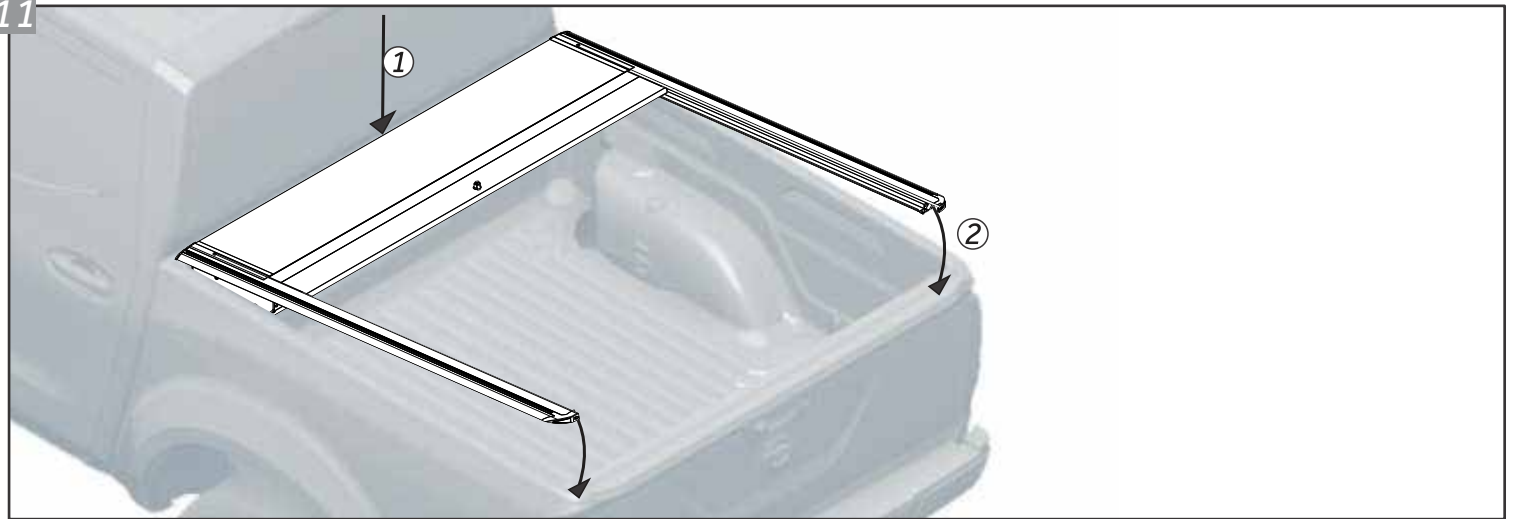

12

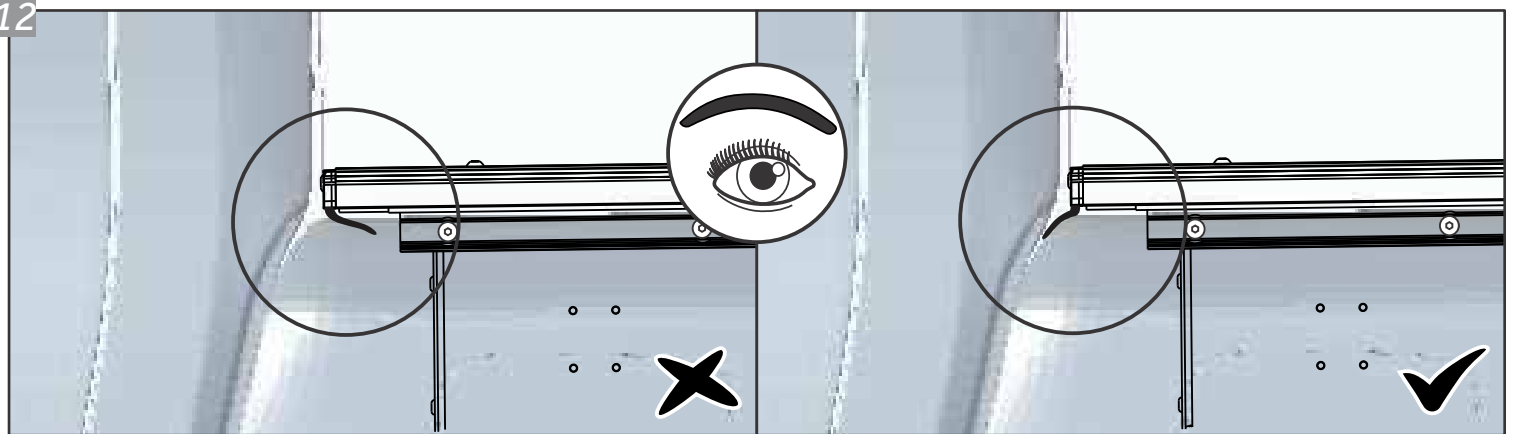


13




INSTALLATION INSTRUCTIONS


14

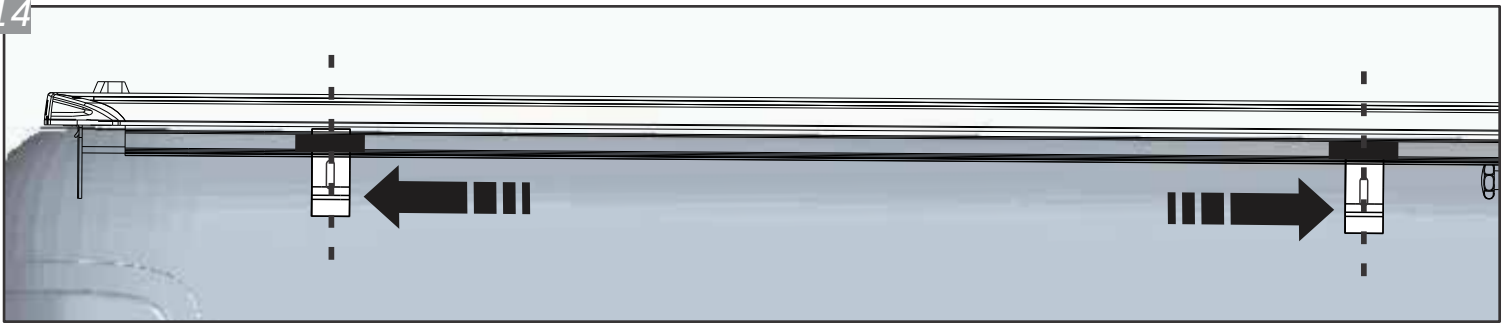


15

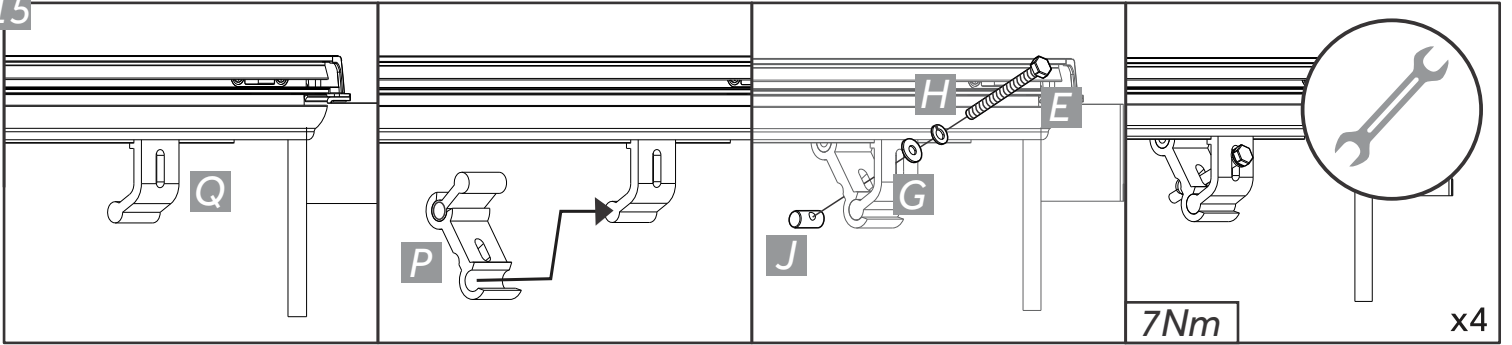


16

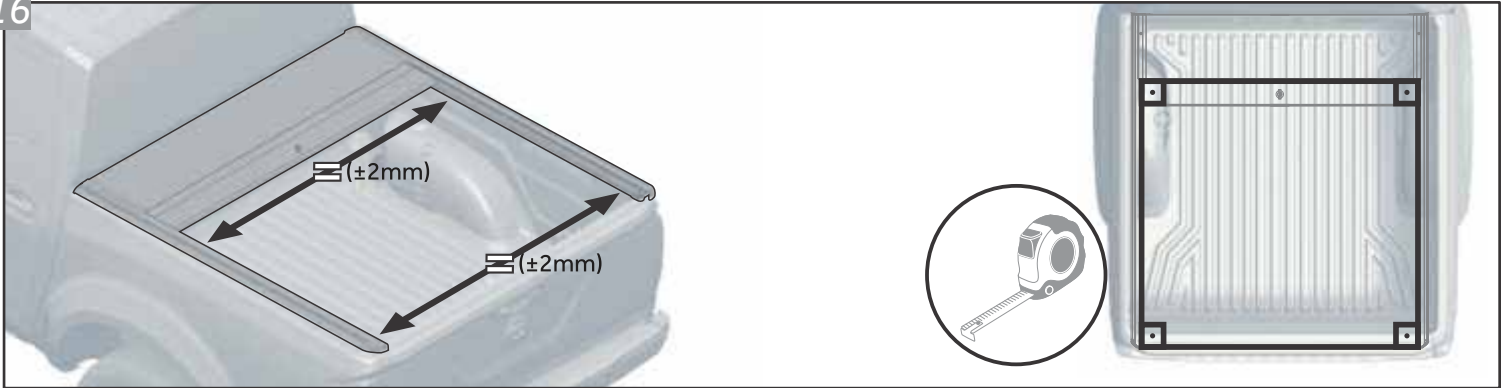

17



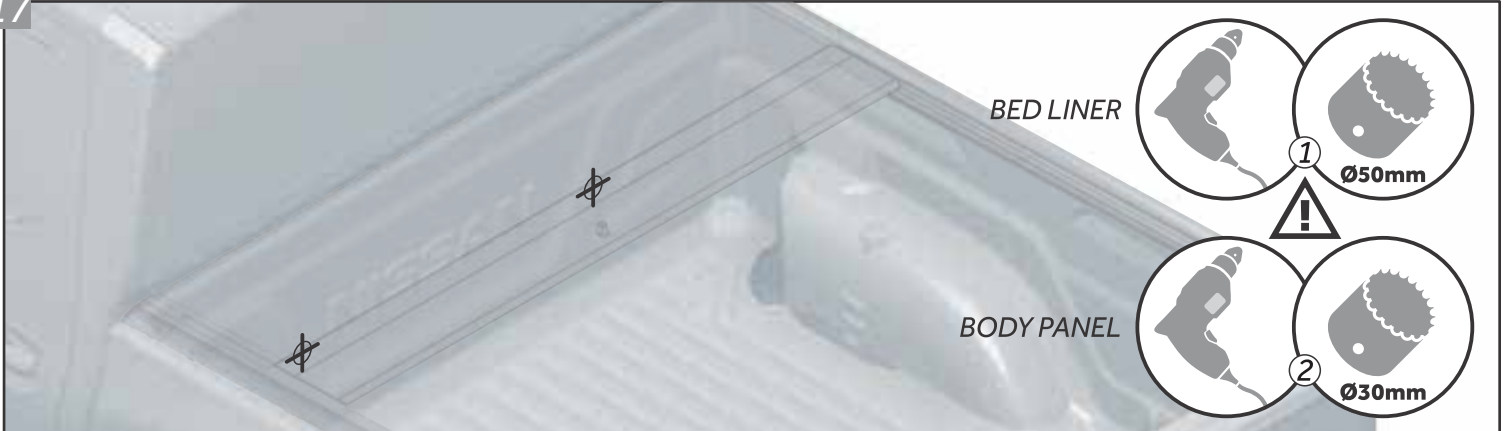


18


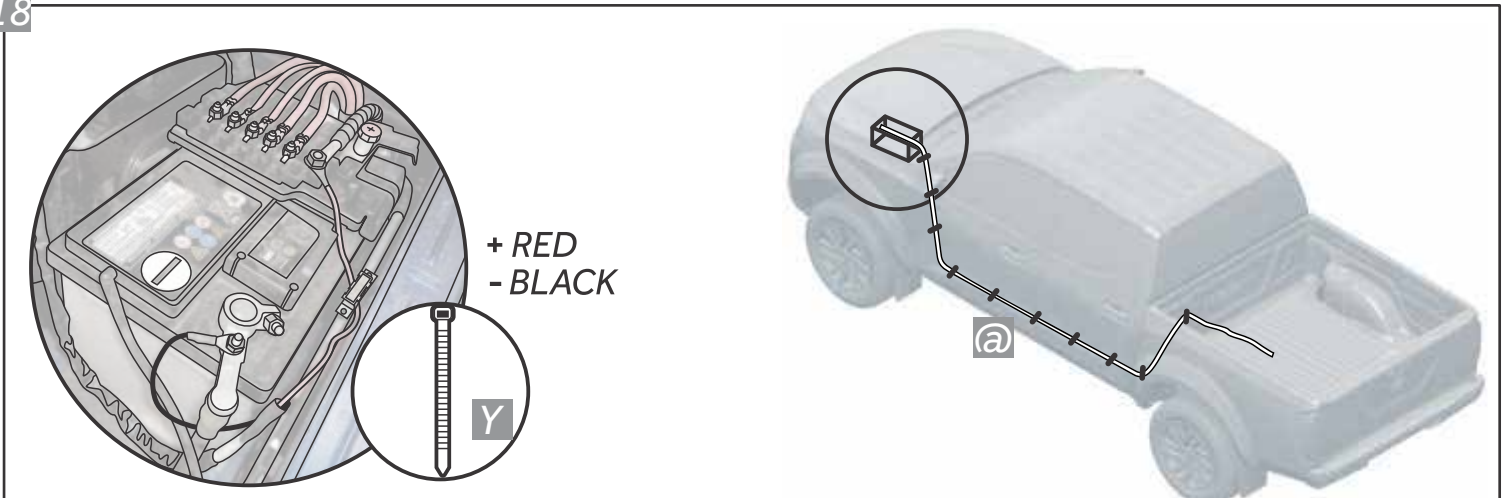


INSTALLATION INSTRUCTIONS

19

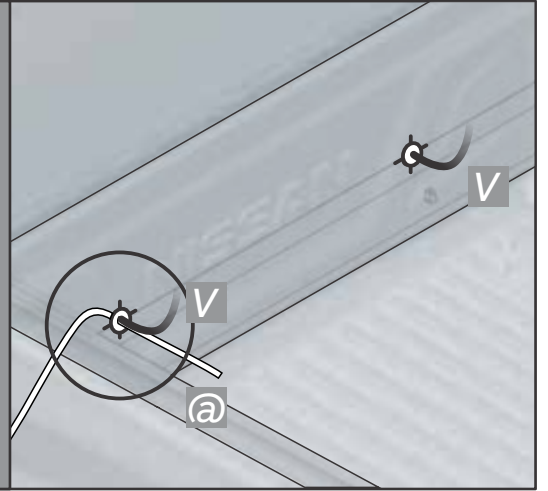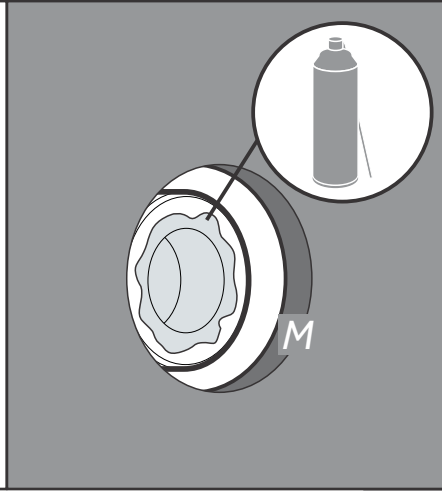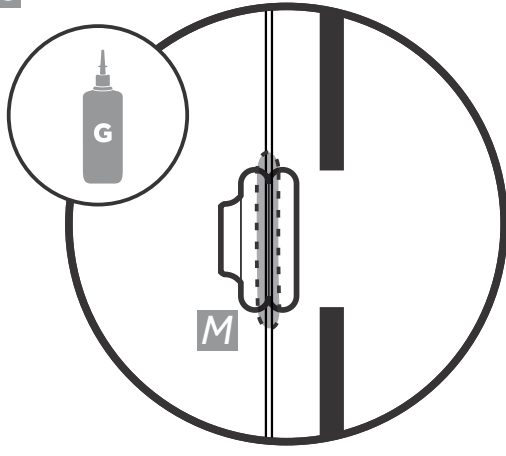


20

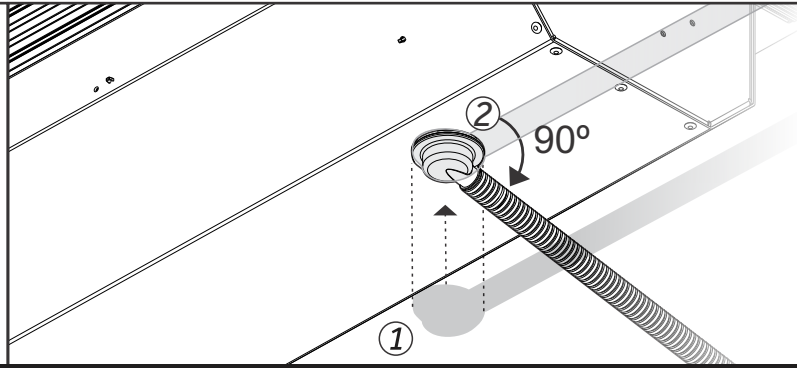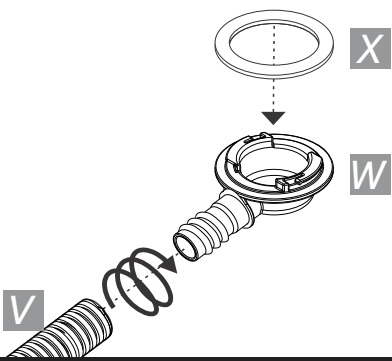


Repeat the procedure for the other side

21

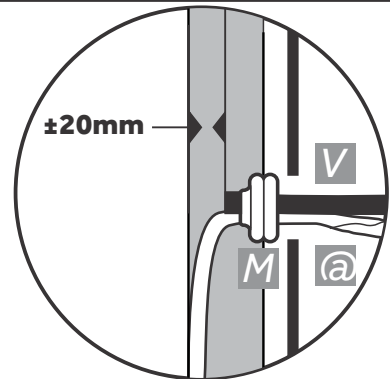

22

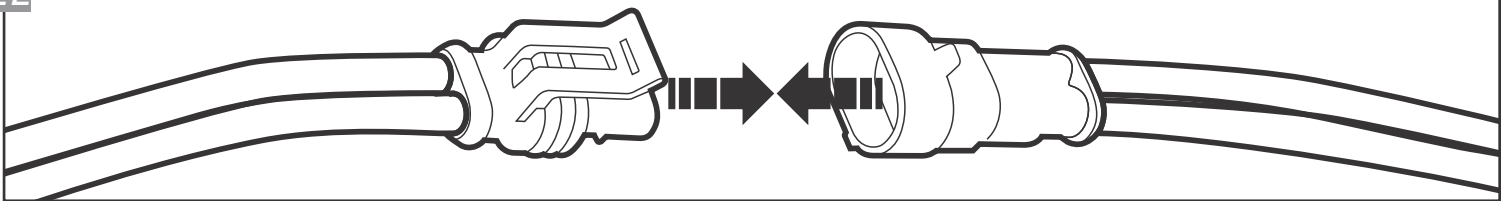


23




INSTALLATION INSTRUCTIONS


24

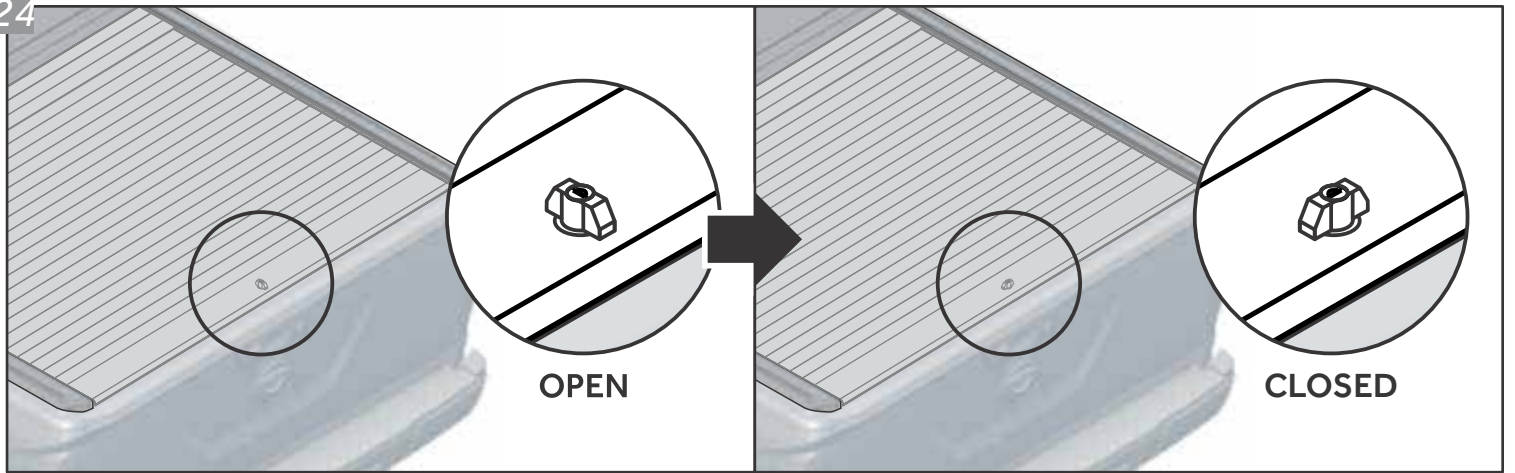


25

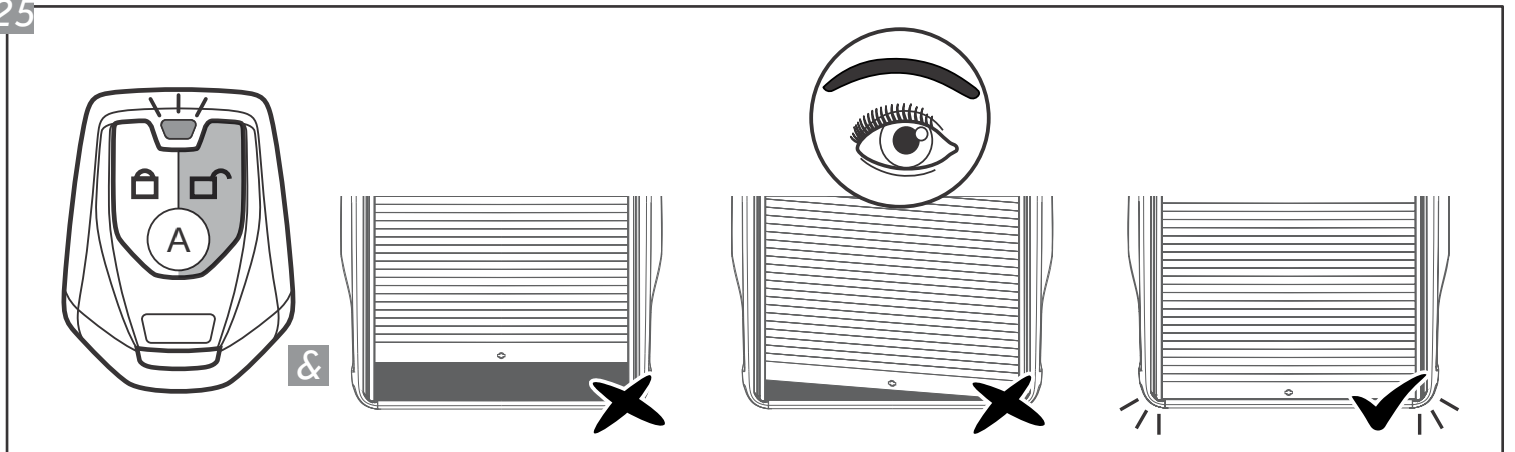

26

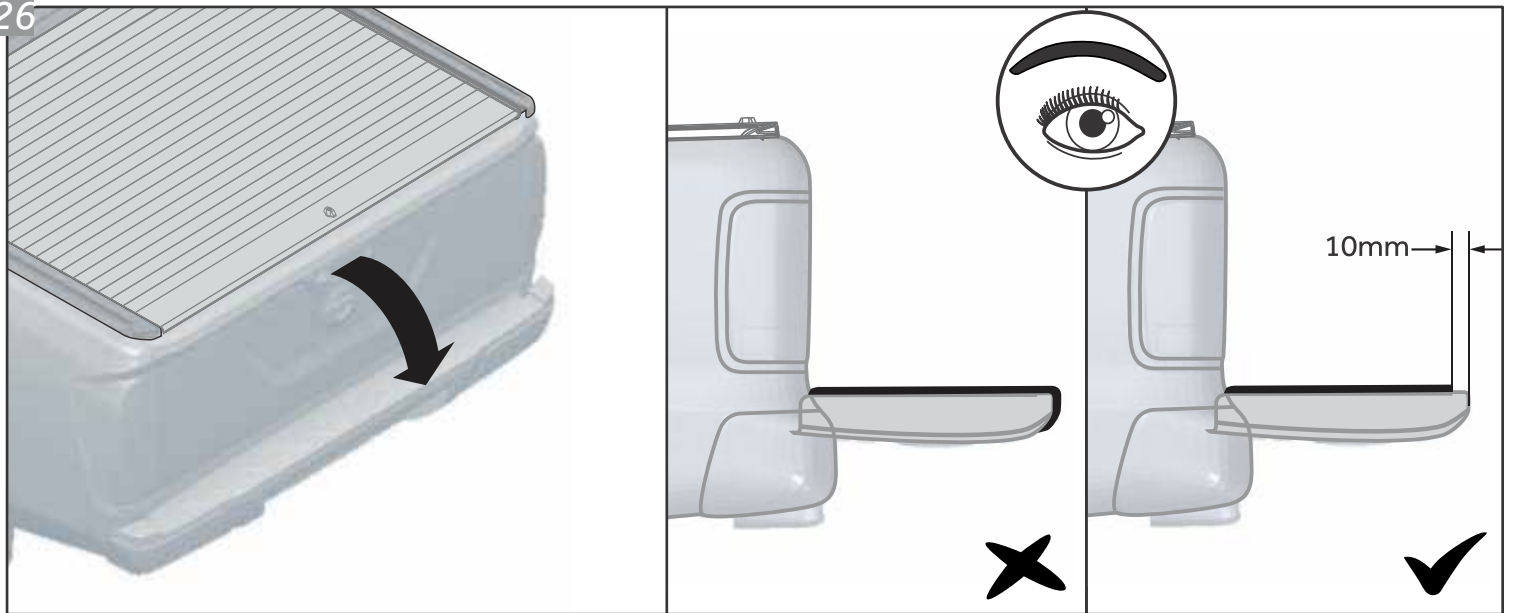


27

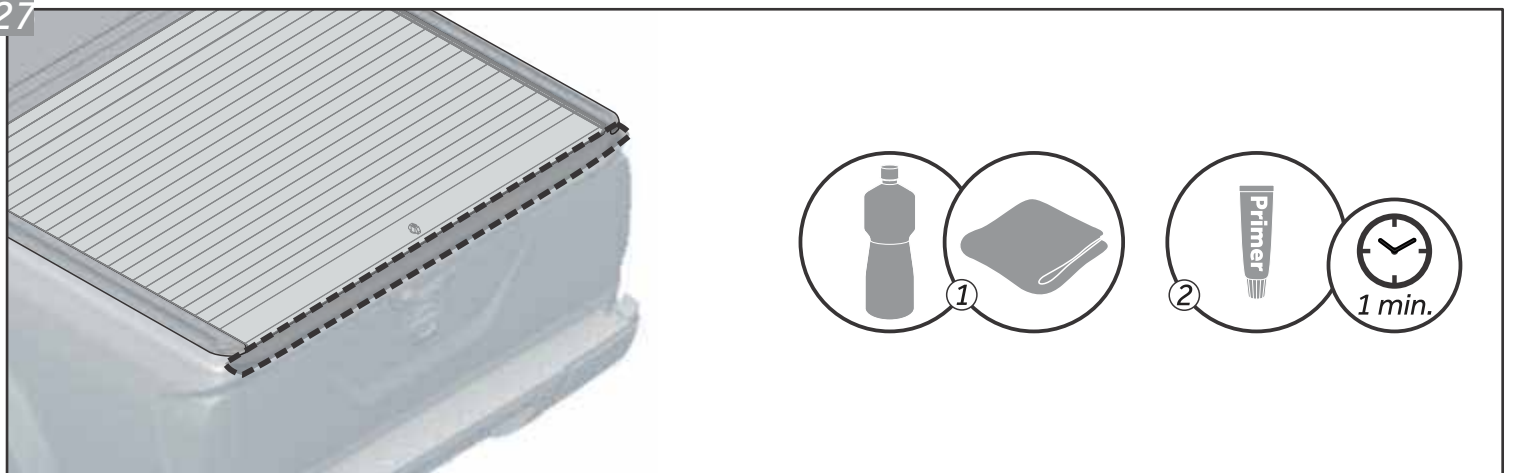


INSTALLATION INSTRUCTIONS


28

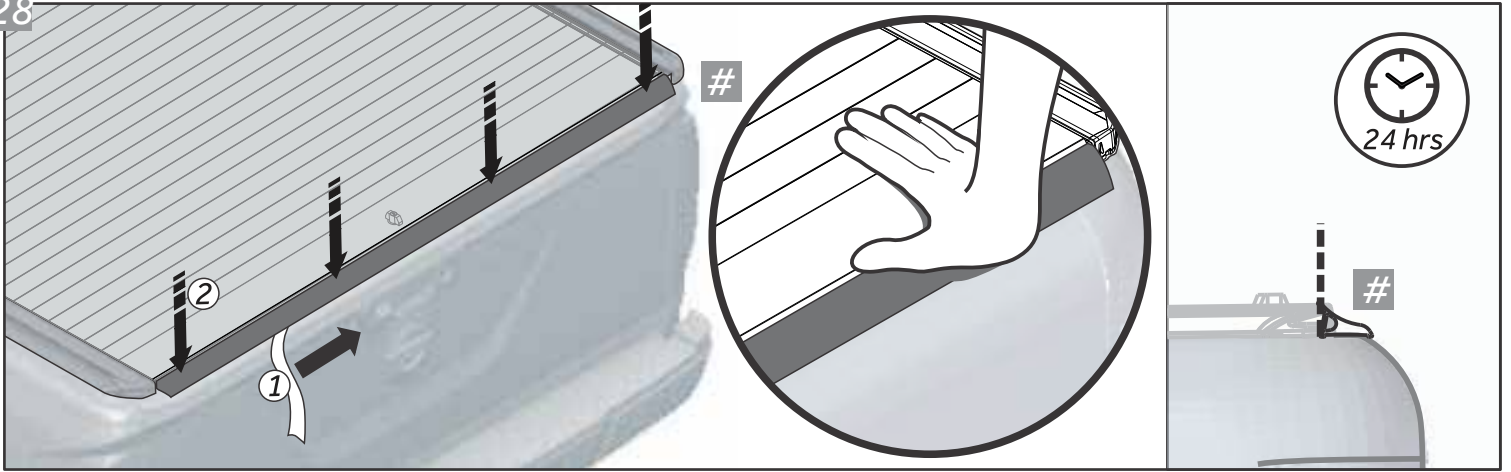


29

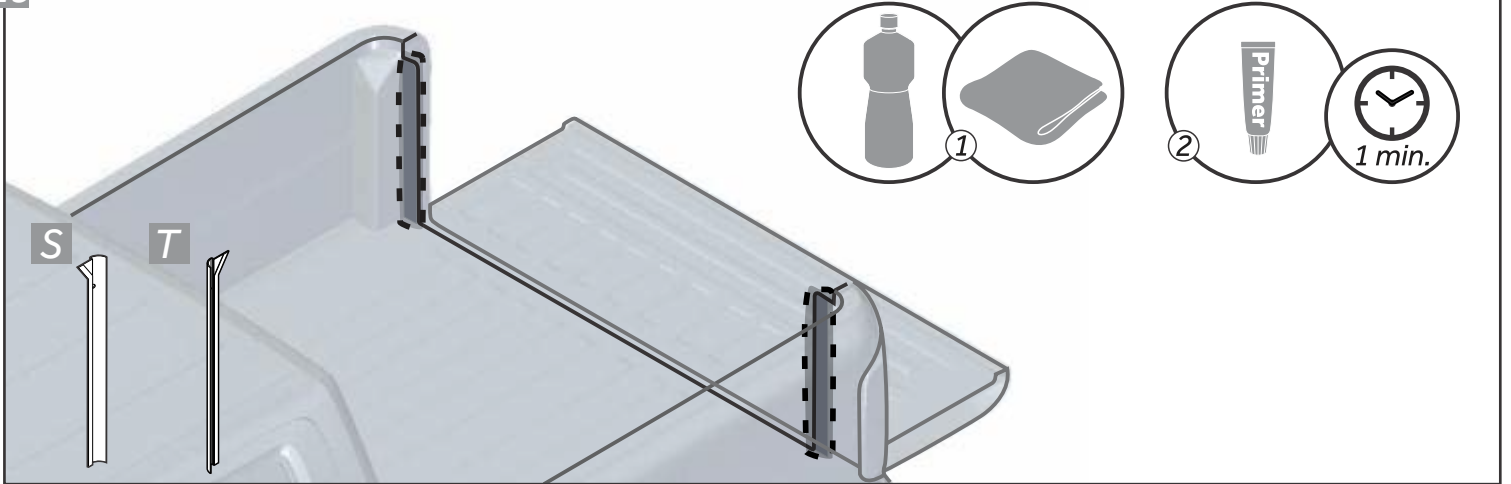

30

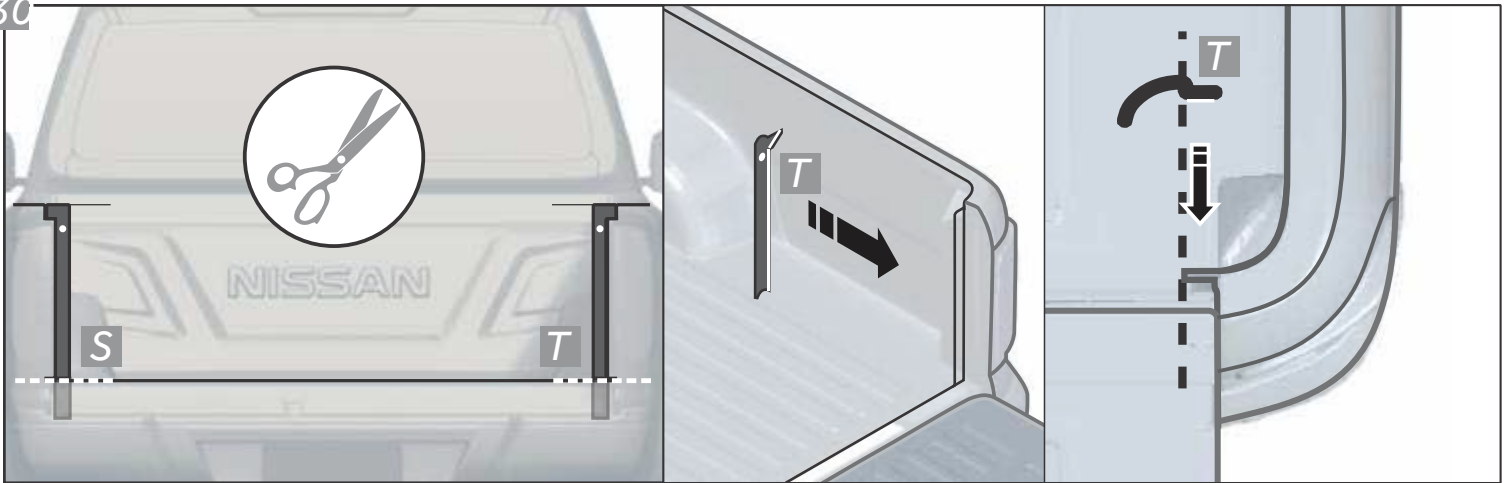


31

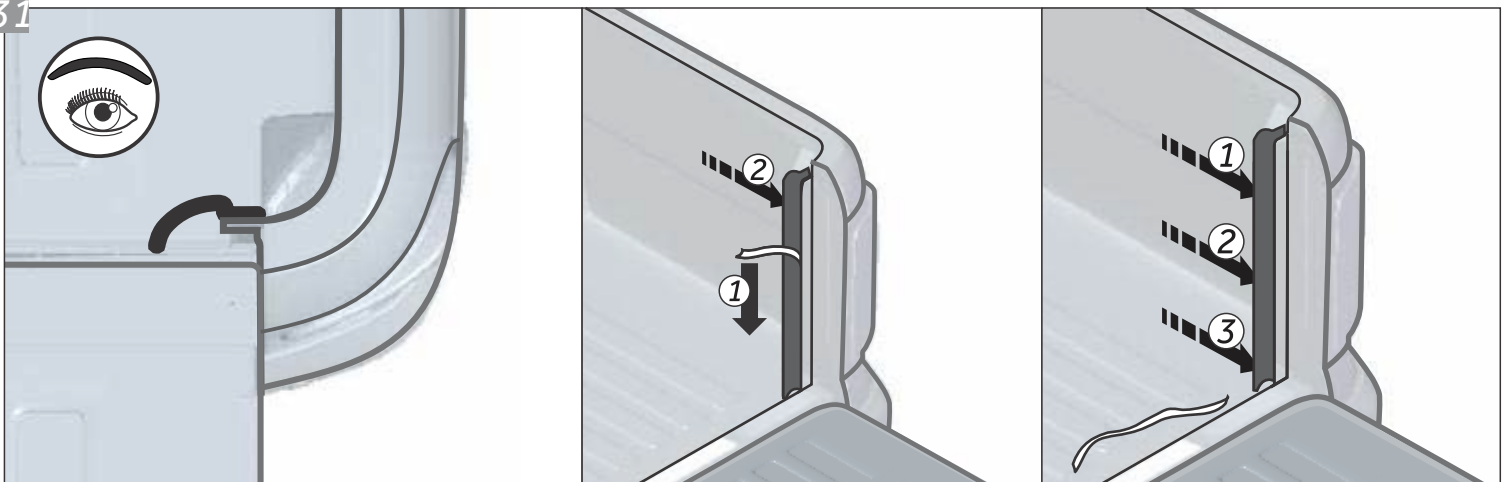


Repeat the procedure for the other side

INSTALLATION INSTRUCTIONS


32

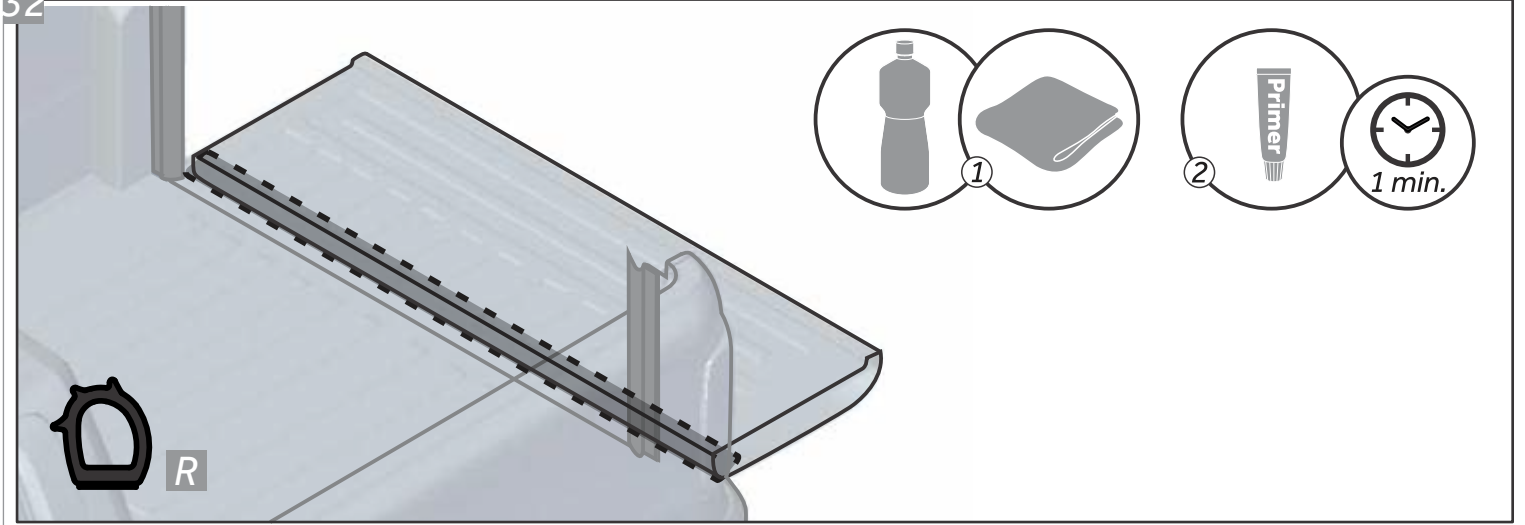


33

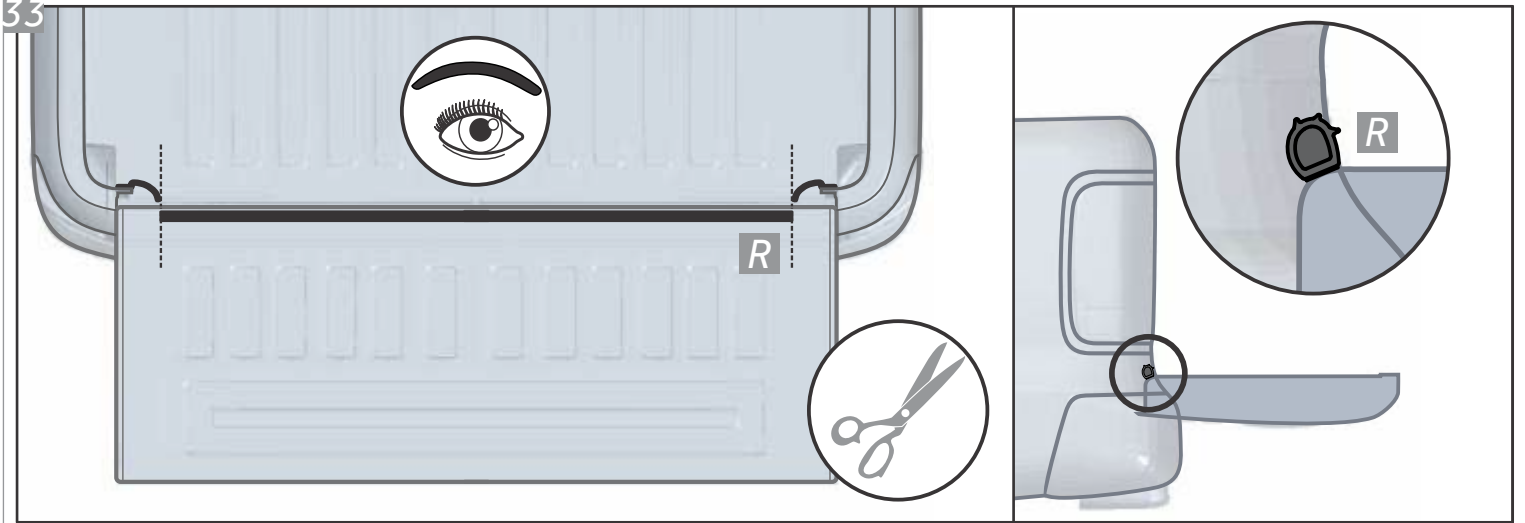


34

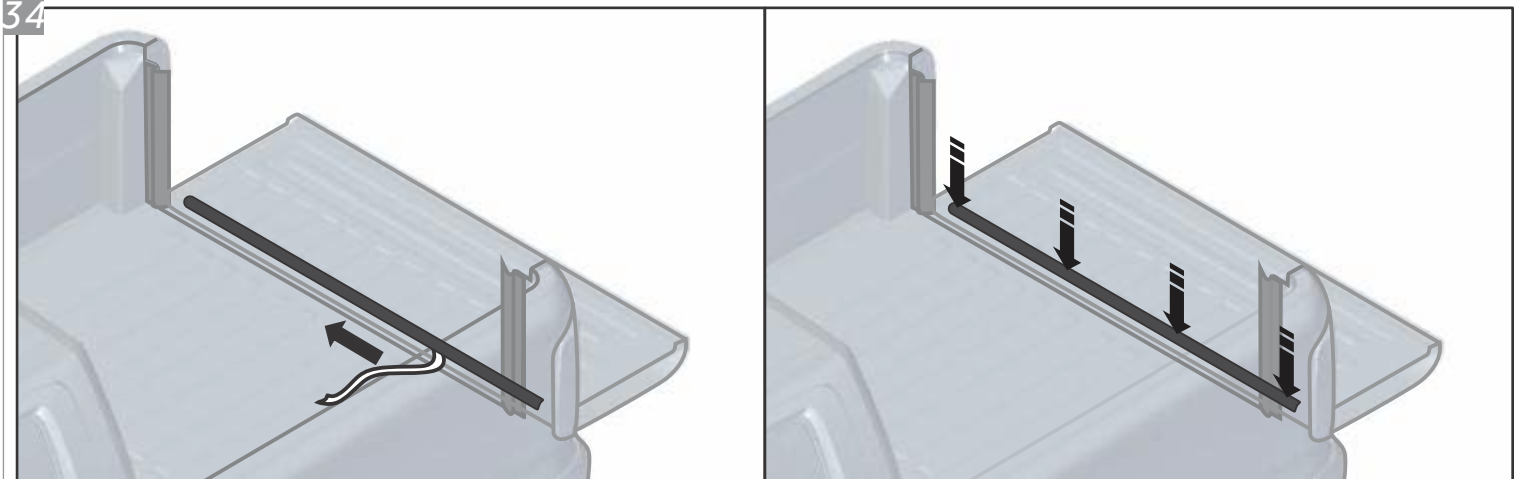

35 Repeat the procedure for the other side

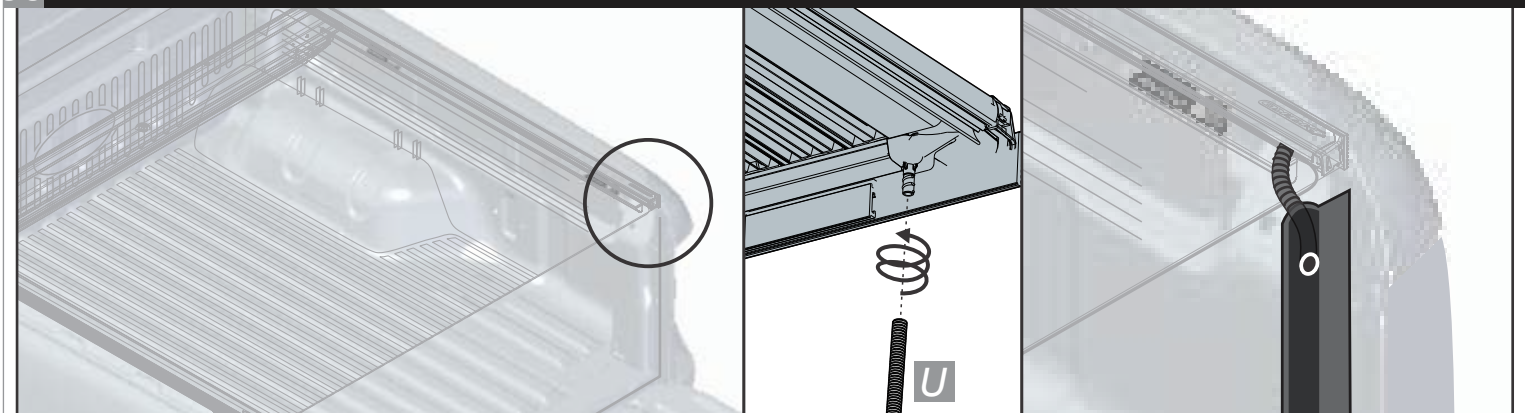

LUBRICATION

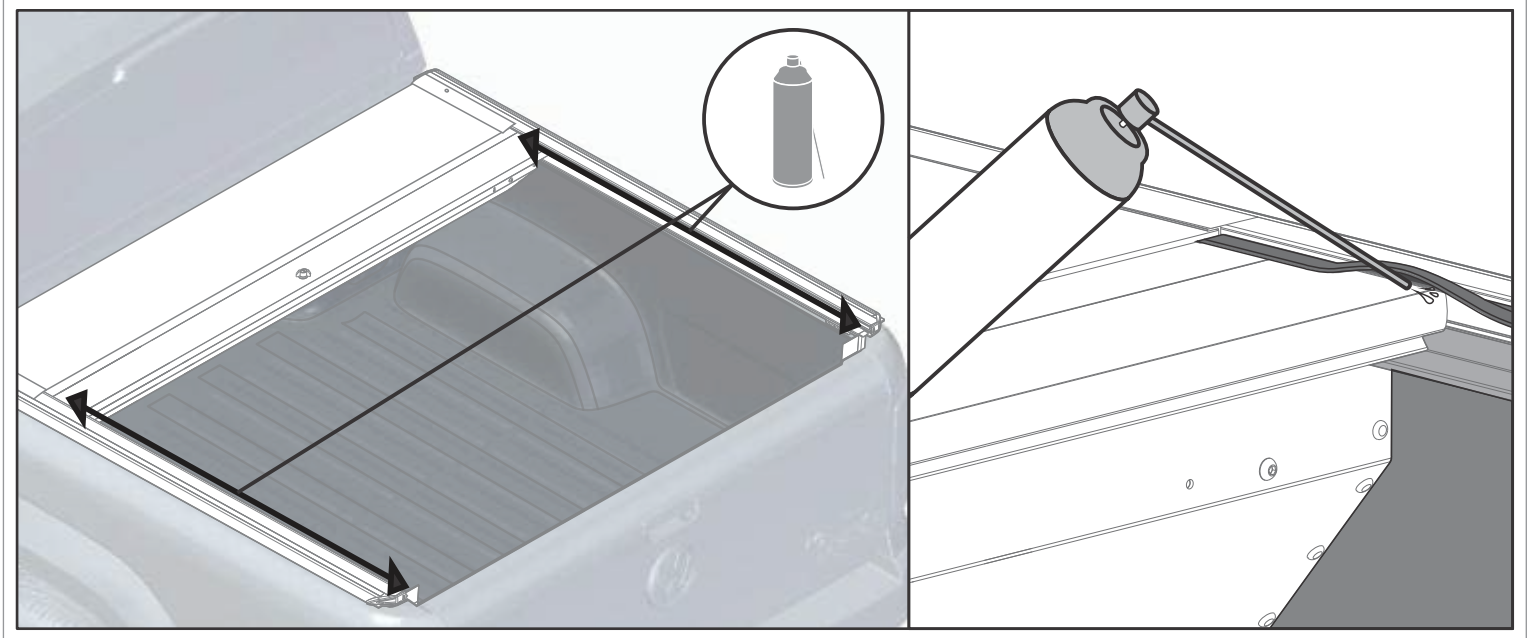

RVE SHUTTER LID INSTALLATION INSTRUCTIONS

FOR INSTALLATION GUIDES GO TO WWW.RVE.CO.NZ

V. 2.0
08.06.2021